

REPAIR PARTS

ORDERING INFORMATION

The following information must accompany all correspondence or repair parts orders.

- 1) Puller capacity
- 2) Serial Number - this is stamped on the Puller frame (640-100 or 640-101).

For parts orders also specify

- 1) Quantity desired
- 2) Key number of part
- 3) Part Name
- 4) Part number of the part

When ordering replacement parts, consideration should be given to the need to replace other items, (bushings, fasteners, etc.) and items that may be damaged or lost during disassembly or just unfit for future use because of

deterioration from age or service.

Parts should be ordered from CM's® Master Parts Depots conveniently located throughout the United States and Canada. Refer to the inside of the front cover of this manual to locate the Master Parts Depot nearest you.



WARNING

USING "COMMERCIAL" OR OTHER MANUFACTURER'S PARTS TO REPAIR THE CM® PULLERS MAY CAUSE LOAD LOSS.

TO AVOID INJURY:

USE ONLY CM® SUPPLIED REPLACEMENT PARTS. PARTS MAY LOOK ALIKE BUT CM® PARTS ARE MADE OF SPECIFIC MATERIALS OR PROCESSED TO ACHIEVE SPECIFIC PROPERTIES.

CM® PULLER PARTS LIST

| KEY NO. | NO. REQ'D. | PART NAME | PART NUMBER | | | |
|----------|------------|--|-----------------|--------|---|--------|
| | | | CAPACITY - TONS | | | |
| | | | 3/4 | 1½ | 3 | 6 |
| 640-100 | 1 | Frame with Bushings (3/4 Tons) | 40684C | - | - | - |
| 640-101 | 1 | Frame with Bushings (1½-6 Tons) | - | 40695C | - | 40695C |
| 640-102 | 1 | Frame Expansion Plug | 940787 | - | - | - |
| 640-103 | 1 | Stripper Screw | 982688 | - | - | - |
| 640-104 | 2 | Chain Guide Attaching Screw | 987274 | - | - | - |
| 640-105 | 1 | Stripper | 40728 | - | - | - |
| 640-106 | 2 | Gear Cover Screw | - | - | 982689 | - |
| 640-107 | 1 | Chain Guide Attaching Screw | - | - | 982565 | - |
| 640-108 | 1 | Friction Hub Key | - | - | 40917 | - |
| 640-109 | 1 | Pinion Thrust Washer | - | - | 40789 | - |
| 640-110 | 1 | Brake Cam Key | - | - | 40824 | - |
| 640-111 | 1 | Brake-Adjusting Nut | - | - | 40785 | - |
| 640-112 | 1 | Brake Adjusting Nut Cotter Pin | - | - | 940805 | - |
| 640-113 | 2 | Lever Cap Screw | - | - | 982717 | - |
| 640-114 | 1 | Liftwheel | 40130 | - | 40140 | - |
| 640-115 | 1 | Chain Guide | 40698B | - | 24718 | - |
| 640-116 | 1 | Liftwheel Bushing (Gear End) | - | - | 40816 | - |
| 640-117 | 1 | Liftwheel Bushing (Brake End) | - | - | 40817 | - |
| 640-118 | 1 | Pinion Shaft Bushing (Brake End) | - | - | 40818 | - |
| 640-119 | 1 | Pinion Shaft Bushing (Pinion End) | - | - | 40819 | - |
| 640-120 | 1 | Gear Cover | - | 40209 | - | 40217 |
| 640-121 | 1 | Pinion Shaft | - | - | 40480 | - |
| 640-122 | 1 | Friction Hub | - | - | 40446 | - |
| 640-123 | 2 | Friction Washer | - | - | 40904 | - |
| 640-124 | 1 | Ratchet with Bushing | - | - | 40662 | - |
| 640-125 | 1 | Lever Ratchet Hub For Units Not Equipped With Load Limiter | - | - | 40570 | - |
| 640-126 | 1 | Brake Cam | - | - | 40122 | - |
| 640-127 | 1 | Lever Assembly (Includes Lever, Expansion Plug, Plunger, Plunger Spring, Spring Pin Trigger, Trigger Pin, Warning Label and Nameplate) | - | - | 40663 For Units Without Load Limiter 40928 For Units With Load Limiter | - |
| 640-128 | 1 | Load Sentry Assembly | 4096 | - | 4098 | - |
| 640-129 | 1 | Ratchet Plunger | - | - | 40517 | - |
| 640-130 | 1 | Ratchet Plunger Spring | - | - | 40742 | - |
| 640-131 | 1 | Ratcher Plunger Spring Pin | - | - | 983880 | - |
| *640-132 | 1 | Upper Hook Assembly (Includes Latch) | 40601 | 40603 | 40605 | 40607 |
| 640-133 | 1 | Upper Hook Nut or Collar | 986383 | 40445 | 40382 | 70393 |
| 640-134 | 1 | Upper Hook Pin | 983768 | 45841 | 982335 | 983787 |
| 640-135 | 1 | Upper Hook Washer | - | - | - | 40736 |
| 640-136 | 1 | Anchor Sling | 4071 | 4072 | - | - |
| 640-137 | 1 | Lever Cap | - | - | 40576 | - |