

FAULT INDICATORS

- Fault indicators are used to detect fault location on overhead distribution systems
- Manual reset
- Four trip ratings available
- Bright red indicator for easy visual sighting
- Installation - indicators can be installed with conventional shotgun stick, or can be installed from the ground using a telescopic stick and the installing tool 10-141
- Weatherproof - indicators are hermetically sealed
- Indicators can be used on all primary voltages and are reset with magnet
- Conductor Range - Indicators can be installed on conductors up to 1 1/2” maximum diameter
- Accuracy is ± 10% of trip rating

CAT NO	DESCRIPTION	LBS
21361	100 AMP FAULT INDICATOR	0.5
21358	200 AMP FAULT INDICATOR	0.5
21359	450 AMP FAULT INDICATOR	0.5
21360	800 AMP FAULT INDICATOR	0.5
P30306	CARRYING CASE - HOLDS 6 INDICATORS AND RESET MAGNET	1.7
12005	MANUAL RESET MAGNET ONLY	0.3
10-141	INSTALLING TOOL	0.5



21361



10-141



P30306



12005