



10 PIECE SCREW EXTRACTOR SET

Product #: J9500B

- › Drive into end of broken pipe or fitting.
- › Use tap holder or wrench on extractor to turn out broken part.
- › Size stamped on extractor refers to drill bit size to be used with that extractor.

Contents	Description	Overall Length (in)
J9521	Screw, Extractor 1/8"	2-5/16
J9522	Screw, Extractor 3/16"	2-5/8
J9523	Screw, Extractor 15/64"	2-7/8
J9524	Screw, Extractor 5/16"	3
J9525	Screw, Extractor 3/8"	3-1/4
J9525B	Screw, Extractor 15/32"	3-7/8
J9526	Screw, Extractor 9/16"	4-1/4
J9527	Screw, Extractor 21/32"	4-7/8
J9528	Screw, Extractor 13/16"	5-3/8
J9529	Screw, Extractor 1-1/16"	5-1/2

Weight (lbs): 4.50



SCREW EXTRACTORS

5 PIECE SCREW EXTRACTOR SET

Product #: J9500A

- › Drive into end of broken pipe or fitting.
- › Use tap holder or wrench on extractor to turn out broken part.
- › Size stamped on extractor refers to drill bit size to be used with that extractor.

Contents	Description	Overall Length (in)
J9521	Screw, Extractor 1/8"	2-5/16
J9522	Screw, Extractor 3/16"	2-5/8
J9523	Screw, Extractor 15/64"	2-7/8
J9524	Screw, Extractor 5/16"	3
J9525	Screw, Extractor 3/8"	3-1/4
J25TR49C	Tool Roll 5 Pockets	6-3/32

Weight (lbs): 0.28



SCREW EXTRACTORS

- › Drive into end of broken pipe or fitting.
- › Use tap holder or wrench on extractor to turn out broken part.
- › Size stamped on extractor refers to drill bit size to be used with that extractor.



Product #	U.S.S. (in)	Drill Size (in)	Diameter Minimum (in)	Diameter Maximum (in)	Overall Length (in)	Weight (lbs)
J9521	1/4, 5/16	1/8	1/8	3/16	2-5/16	0.02
J9522	3/8	3/16	11/64	3/16	2-5/8	0.02
J9523	7/16	15/64	13/64	1/4	2-7/8	0.05
J9524	1/2, 9/16	5/16	19/64	5/16	3	0.07
J9525	5/8	3/8	11/32	3/8	3-1/4	0.12
J9525B	3/4	15/32	1/8	1/8	3-7/8	0.18
J9526	7/8	9/16	1/2	1/2	4-1/4	0.29
J9527	1, 1-1/8	21/32	19/32	5/8	4-7/8	0.47
J9528	1-1/4, 1-3/8	13/16	23/32	3/4	5-3/8	0.72
J9529	1-1/2	1-1/16	31/32	1	5-1/2	1.30

