

INDICATOR HOLDERS

657-1, 657-2 MAGNETIC BASE UNIVERSAL INDICATOR HOLDER

WITH TRIPLE JOINTED ARM AND FINE ADJUSTMENT

This versatile indicator holder has three pivots available for positioning the indicator where needed. All pivots are controlled by one tightening knob. It will hold:

- Any indicator with a 3/8" (9.5mm) stem (such as our 25, 650 and 651 Indicators)
- Any indicator with a standard dovetail mount (such as our 708, 709, and 811 Indicators)
- Any indicator with a 1/4" (6.3mm) shank (such as our 196 Indicator)
- Any indicator with a 3/16" (4.7mm) shank (such as our 708, 709, 811 and 711 Indicators)
- Any indicator with a body clamp (such as our 711 Indicators)
- The working area is within a hemisphere having a radius of approximately 12" (300mm)
- The very sensitive fine-adjustment is located on the magnetic base to eliminate indicator deflection when it is being adjusted
- The 657-3 Universal Indicator Holder Arm Assembly can also be used on the 659P Base using the 659 Thread Adaptor, PT18318

660 MAGNETIC BASE INDICATOR HOLDER WITH TRIPLE JOINTED ARM

The compact and versatile 660 Magnetic Base Indicator Holder has three adjustable pivots controlled by a single knob for fast, easy indicator positioning.


- Small but powerful magnetic base with 70lb (320N) holding force
- Positive On/Off switch
- Base Dimensions: 1-3/16" x 1-9/16" x 1-3/8" (30mm x 40mm x 35mm)
- Horizontal and vertical mounting positions
- Will hold any indicator with a 3/8" (9.5mm) stem or standard dovetail mount
- Articulating arm with powerful central locking knob, provides full 360° horizontal positioning and over 180° vertical positioning
- Maximum Horizontal Reach: 4.750" (120mm); Maximum Vertical Reach: 7.500" (190mm)
- Very sensitive fine-adjustment thumb screw

657-1 and 657-2 Magnetic Base Universal Indicator Holders - Individual Components

Photo Key	Description	Cat. No.	EDP
A	Universal Indicator Holder Arm Assembly Only	657-3	64438
B	Fine-Adjustment Attachment	657W	52763
C	Indicator Holding Rod	PT17850	72400
D	Magnetic Base Only	657P	52757
E	Snug with Two 1/4" (6.3 mm) Holes	657S	52759

657-1 and 657-2 Magnetic Base Universal Indicator Holders - Complete Assemblies

Description	Cat. No.	EDP
Universal Indicator Holder, 657W Fine-Adjustment, 657P Magnetic Base, PT17850 Indicator Holding Rod, and 657S Snug	657-1	64436
Universal Indicator Holder with 657 Magnetic Base	657-2	64437

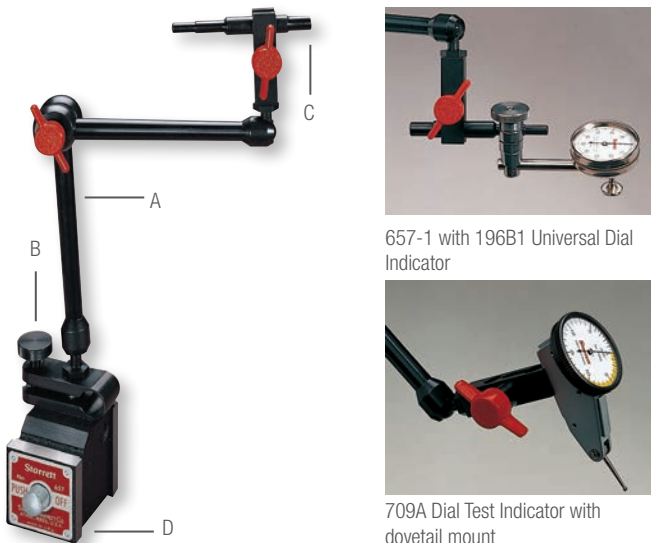

660 Magnetic Base Indicator Holder

Description	Cat. No.	EDP
Base Indicator Holder	660	68621



660 shown with Dial Indicator

